

MP5

FOREGRIP BATTLE LIGHT



Technical Manual

☐ 39992-LED

STEINER 
Nothing Escapes You

TABLE OF CONTENTS

	Page
Safety Summary	2
General Information	3
Specifications	3
Installation of MP5 Foregrip	4
Activating the Light	5
Replacing the Batteries.....	6
Replacing the Flashlight Lamp Assembly	8
Troubleshooting the Flashlight.....	9
User Maintenance.....	10
Warranty	10

SAFETY SUMMARY

Safety First

Unload your HK MP5 (remove the magazine and any cartridge in the chamber) prior to mounting the light on your weapon. Please familiarize yourself with the location of the pressure pad switch for the light. Make sure the light and the firearm are pointed in a safe direction prior to attaching the MP5 Foregrip to the weapon.

General Information

Please read these handling and safety instructions as well as the instructions for your HK weapon before attempting to install or use this laser aiming device. In addition, please observe all laws in your area relating to the use of firearms and laser aiming devices. Failure to properly install this device may result in damage to your firearm.

SPECIFICATIONS:

Type: White Light LED

Lamp: High intensity, recoil-resistant LED

Output: 200 lumens

Range: 115 meters

Weight: 11.3 oz.

Length: 9.5 in.

Diameter: 1.56 in

Battery: 2 x CR 123A

Battery Life: 1.5 hours

Material: Aircraft Aluminum 6061-T6, MIL-SPEC Type III hard coat anodizing

Waterproof: Submersion to 5 meters

Warranty: Heritage Warranty™

Installation of the MP5 Foregrip

Step 1. Confirm that your weapon is completely unloaded (check the chamber and the magazine).

Step 2. Remove the foregrip supplied with the MP5 (see instructions supplied with the weapon). Make sure to retain the mounting pin used to secure the foregrip on the weapon.

Step 3. Install the foregrip laser on the weapon. Replace the mounting pin supplied with the weapon. See figure 1.

Step 4. Install the batteries into the foregrip.

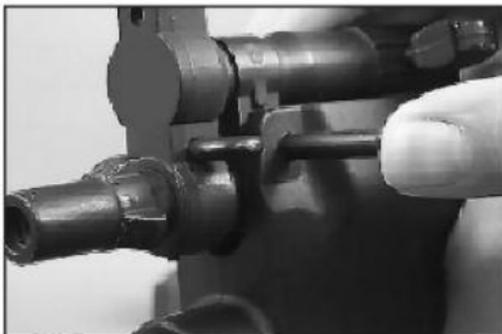


Figure 1

Activation the Light

To activate the laser foregrip, depress the Momentary pressure pad switch. See Figure 2.

In addition to the Momentary pressure pad switch, the foregrip laser can also be supplied with an optional Positive OFF (kill) switch to prevent accidental activation of the Momentary pressure pad switch or a Positive ON rocker switch which allows the laser to be activated continuously.



Figure 2

Replacing the Batteries

The two, 3-volt CR 123A batteries used in the foregrip laser will provide up to 1.5 hours of use. When the light starts to dim, the batteries need to be changed.

Step 1. Confirm that your weapon is completely unloaded (check the chamber and the magazine) and turn the light off.

Step 2. Grasp the flashlight head and lamp assembly with your fingers and unscrew in a counter-clockwise direction.

Step 3. Remove the old batteries.

Step 4. Install the new batteries with the positive (+) terminal facing into the foregrip and the negative (-) terminal facing the light head. See Figures 3 and 4.

Step 5. Reinstall the flashlight head and lamp assembly by screwing in a clockwise direction.

Step 6. Test the light to confirm proper operation.



Figure 3



Figure 4

Replacing the Flashlight Lamp Assembly

The lamp assembly will need to be replaced on a regular basis. To minimize the risk of an unexpected failure, always keep a spare lamp assembly on hand.

Step 1. Confirm that your weapon is unloaded (check the chamber and the magazine).

Step 2. Remove the flashlight head by turning in a counter-clockwise direction.

Step 3. Carefully remove the lamp assembly.

Step 4. Carefully install the replacement lamp without touching the glass bulb with your fingers. See Figure 5. If you accidentally touch the glass bulb, gently clean it using an oil free cloth and rubbing alcohol.

Step 5. Reinstall the flashlight head by turning in a clockwise direction.

Step 6. Test the tactical light to confirm proper operation.



Figure 5

Troubleshooting the Flashlight

If the flashlight fails to operate or appears to operate at low power, check the following prior to contacting the Steiner for repair.

1. Fails to Operate

- a. Replace the battery. See Replacing the Batteries, page 6.
- b. Check the battery installation. Make sure the batteries were installed with the positive (+) terminal facing into the foregrip and the negative (-) terminal facing the flashlight head.

2. Light is Weak or Dim

- a. Check the front lens for dirt or power residue. If the front lens is dirty, clean with glass cleaner being careful not to scratch the lens.

User Maintenance

To clean the front cap, blow the dust off of the lens, rinse with fresh water and use a cotton swab to clean the lens. Do not use gun oil or harsh chemicals to clean the front lens as it may damage. If the MP5 Foregrip will be stored for an extended period of time, be sure to remove the batteries to prevent the possibility of corrosion.

Steiner Heritage™ Warranty

We are committed to building optics that never need service. However, should one become damaged or defective, for any reason other than theft or deliberate misuse, we will repair or replace it at no charge - no questions asked. That's our promise to not only you, but to all those who will own your Steiner optic after you.

- No warranty card needed
- No receipt required
- Fully transferable - from generation to generation



STEINER-EOPTICS

70 Garden Court., Monterey, CA 93940

Tel: (831) 373-0701

steiner-defense.com